


1. Charge the Battery

Charge it fully by plugging your Smart Pro into an AC (120V) outlet. Solid Yellow LED light indicates a fully charged battery.

NOTE: If the battery does not charge, verify that it is connected. Open the battery compartment. If unplugged, plug battery into the connector.

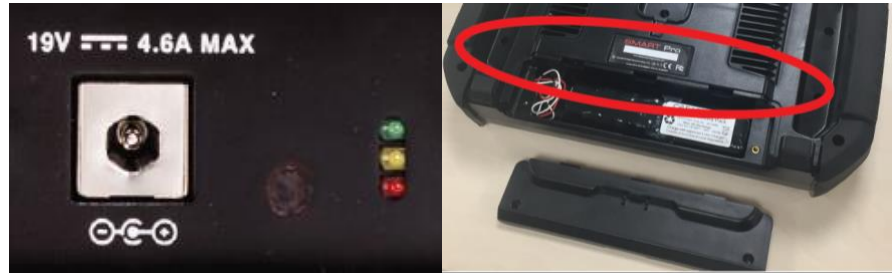

2. AD Loader

Power on and connect Smart Pro to a PC with internet access via USB cable. Latest version of AD Loader is 6.6.8 or higher. Don't have the AD Loader program? Download and install it from www.advanced-diagnostics.com. Click Smart Pro

3. Register Your Machine

If you previously owned an MVP Pro or T-Code Pro, simply click on Existing User and put in your username and login password. If this is your first AD machine, fill in your information under New User in the Registration form.

Existing Users

New Users

4. Load the Software

Using AD Loader on your PC, click on "Load Device," "Clear All" then check ONLY 1 box then "Go", see below. Once your Core App Module has successfully loaded, click "Select All" and "Go" to update your remaining Automotive software.

